

IMPORTANT SAFEGUARDS

PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before you install and use the luminaire.

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -22 °F to 104 °F and to be horizontally mounted with the LEDs facing down.
- Wall mount only.
- Suitable for wet location.



WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

1. To prevent personal injury or product damage only licensed electricians should install.
2. To avoid electric shock or component damage disconnect power before attempting installation or servicing.
3. Disconnect product and allow cooling prior to servicing.
4. Any alteration or modification of this product is forbidden as it may cause personal injury, death, property damage and/or product malfunction.
5. To prevent product malfunction and/or electrical shock this product must be properly grounded.
6. This luminaire is designed to operate in ambient temperatures ranging from -40 °F to 113 °F.
7. Min 194 °F supply conductors.
8. Consult a qualified electrician to ensure correct branch circuit conductor.

METHOD A

1. Fix the MWP fixture on the wall through the side ear holes with 2x MP screws (Fig 1)

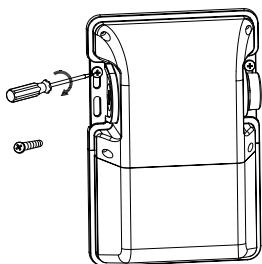


Fig 1

2. Connect the wires as shown below. (Fig 2 & 3)

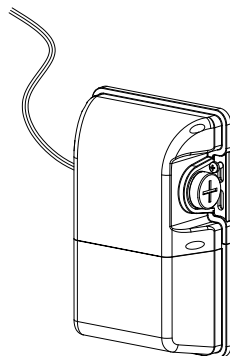


Fig 2

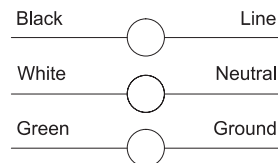


Fig 3

3. Unscrew the cap to select desired CCT/wattage/ photosensor function, and then cap back. (Fig 4)

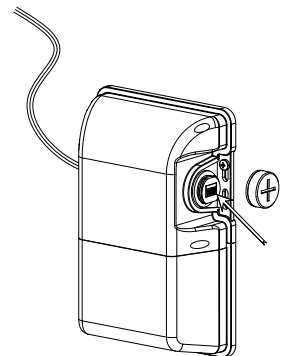


Fig 4

METHOD B

1. Unscrew the 4xM3 screws on the MWP front cover (driver box). (Fig 1)

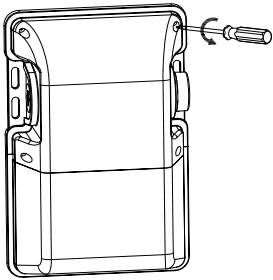


Fig 1

2. Unplug the male and female connector, then remove the driver box. (Fig 2)

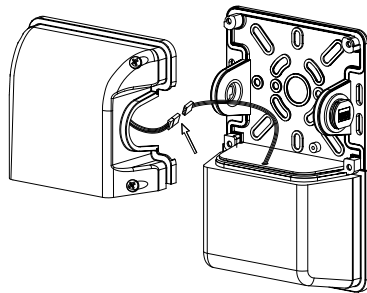


Fig 2

3. Drill holes on the MWP base according to the preserved junction box or mounting position on the wall. Fix the MWP fixture and then connect the wires as shown below. (Fig 3 & 4)

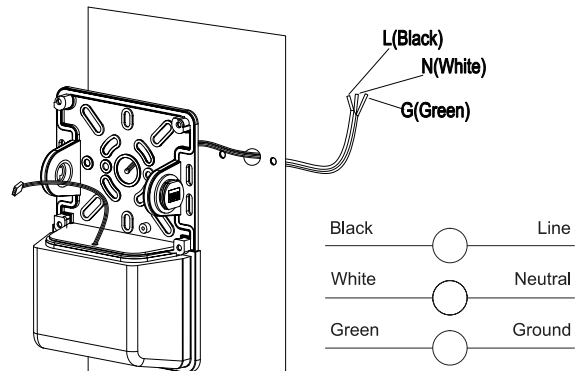


Fig 3

Fig 4

4. Connect the male and female connectors. Carefully & tightly attach the MWP front cover (driver box) back to the base by the 4xM3 screws. (Fig 5)

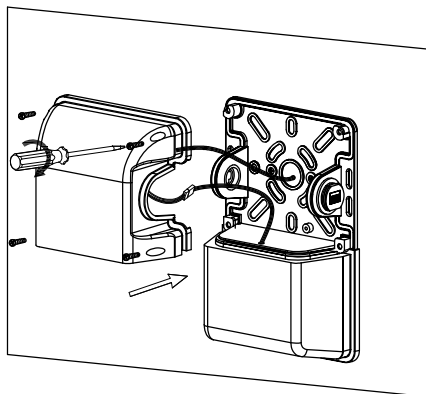


Fig 5

5. Unscrew the cap to select desired CCT/wattage/photosensor function, and the cap back. (Fig 6)


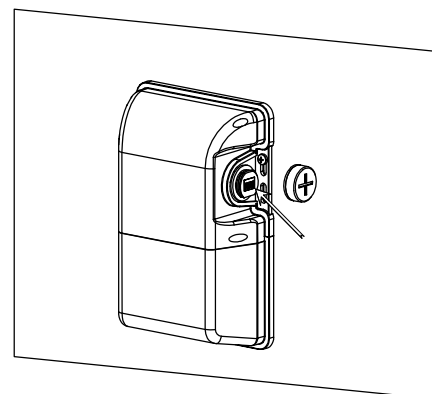


Fig 6


CCT & Power Select Guidance

Warning:


1. Select desired CCT & Wattage before operation.
2. Cap must be screwed back after CCT & Power selection.

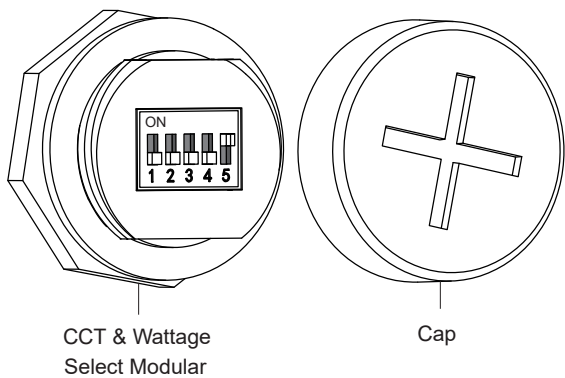

Wattage Select

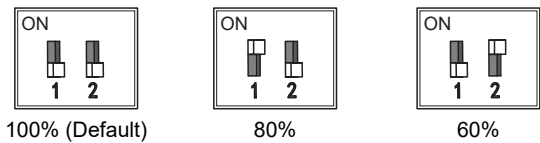

Photocell

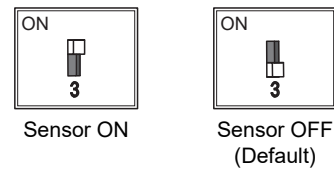

CCT Select

