CONTRIZZA CCT & POWER TUNABLE ARCHITECTURAL TROFFER 2 X 2



IMPORTANT SAFEGUARDS

PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before you install and use the luminaire. WARNING, CAUTIONS AND OPERATING INSTRUCTIONS

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a qualified licensed electrician.
- For the installation: If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician and check your local electrical code.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.

WARNING: RISK OF FIRE OR ELECTRICAL SHOCK

- Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- Turn off the power when you perform any maintenance.
- · Verify that supply voltage is correct by comparing it with the luminaire label information.
- All wiring connections should be capped with UL approved wire connectors.

CAUTION: RISK OF INJURY

- · Avoid direct eye exposure to the un-louvered light source while it is on.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- Risk of burn. Disconnect power and allow fixture to cool before changing bulb or handing fixture.
- Green ground screw provided in proper location.


DO NOT RELOCATE.

- Minimum 90° supply connectors.
- · Suitable for Dry or Damp location, Type IC

WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

A. LED Troffer Retrofit

- B. End Brackets 2 ea.
- C. Side Brackets 2 ea.
- D. Self-Tapping Screws 4 ea.



| Fixture Size | Maximum Inner Dimensions |
|--------------|--------------------------|
| 2' x 2' | 24" x 24" x 3.1" |
| 2' x 4' | 48" x 24" x 3.1" |
| | |

Fig. 1

Fig. 2

INSTALLATION

1. Prior to installation, disconnect all incoming power to fixture. Remove existing hardware (lens/lens frame, parabolic louver, reflectors/ballast covers, brackets, lamps/lamp holders). Leave supply and grounding leads. (Fig. 1)


NOTE: Follow all federal and local regulations when disposing of lamps and removed components.

2. Install LED panel end brackets to each end of the existing fixture by gently lifting it and placing LED panel end brackets between the fixture and T-grid.

3. If there is a gap between the fixture and T-grid, LED panel side brackets can be installed between the fixture and T-grid. There are two tabs to allow for placing the side brackets into the slot of end brackets. (Fig. 2)

4. Secure the LED panel brackets to the existing fixture using the provided #8 x 1/2" self-drilling screws. (Fig.3)

5. Locate the LED Troffer Retrofit onto the keyholes of the end brackets, and then slide the LED Troffer Retrofit horizontally onto the end slots. (Fig. 4)

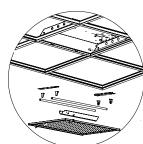



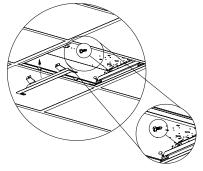


Fig. 3

Fig. 4

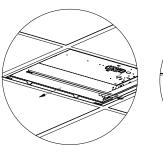

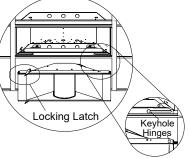

Email : info@ikioledlighting.com Website : www.ikioledlighting.com Phone : (1) 844-533-4546

*©IKIO LED LIGHTING. Unauthorized use or reproduction of illustrations, photographs or text is prohibited. IKIO LED LIGHTING reserves the right to discontinue products or to change the technical and/or design specifications at any time

Installation Instructions | Commercial Lighting


CONTRIZZA CCT & POWER TUNABLE ARCHITECTURAL TROFFER 2 X 2

6. Hook the safety cables into the holes positioned on the end brackets.

7. Use the provided wire caps to connect the wire leads of the troffer kit to the main power leads. (Black-Live, White-Neutral and Green-Ground) (Fig. 5)

8. Secure the LED Troffer Retrofit by locking the latches riveted on each end of the frame. (Fig.6)

GENERAL WIRING DIAGRAM

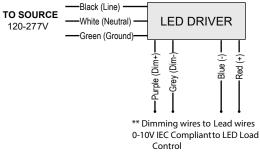

FIELD ADJUSTABLE WATTAGE & CCT

The end users may adjust the color temperature and lumen output, respectively, by the two slide switches integrated into the back of the fixture. Each switch has 3 options (left, middle and right), each position corresponds to 1 of 3 color temperatures (Warm White, Cool White, and Sky-Brite®) and 1 of 3 wattages, which can be adjusted to the desired combination.

Default Settings for 2X2: 40W, 5000K

Default Settings for 2X4: 45W, 5000K

1. Switches are located on the driver. (Fig. 7)

2. Select a wattage and color temperature by sliding switch left or right respectively to the desired value. (Fig. 7)



Fig. 5

Fig. 6

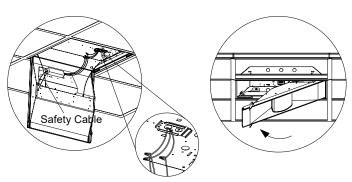


Fig. 7 Wattage CCT Switch Suitch Switch Wattage Switch Wattage Switch Wattage Switch Wattage Switch Wattage Switch Switch Wattage Switch Switch Wattage Switch Swit

2X2 TROFFER RETROFIT

2X4 TROFFER RETROFIT