

DELPHI FUEL PUMP CANOPY LIGHT




IMPORTANT SAFEGUARDS

Warning: Please make sure the power is off before installation.


- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is forbidden as it may cause personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40 °F ~ +122 °F.
- Min 165 °F supply conductors.
- Consult a qualified electrician to ensure correct branch circuit conductor.

Surface Mount with J-box

1. Loosen the screw on the side of the housing and pull out the connecting plate.
2. Fix the connecting plate onto the ceiling and put the wire through center hole.
3. If you need to use the surface-mounted installation, a circle of glue is needed around the edge of the fixed plate.

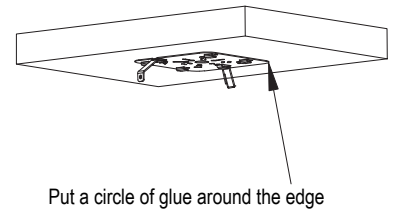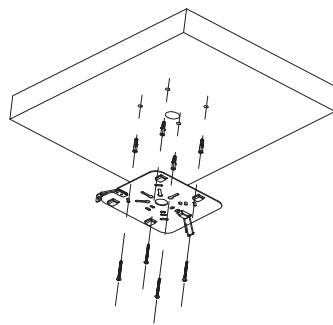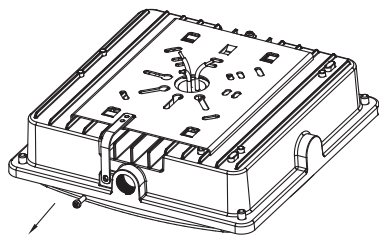


4. Buckle the connecting plate into the clips and connect the wires as shown on side.

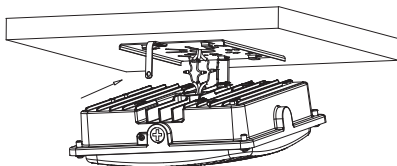



Black	○	Line
White	○	Neutral
Green	○	Ground
Purple	○	Dim +
Grey(Pink)	○	Dim -

5. Slide lamp back into the connecting plate and fix the screw.

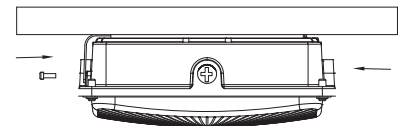


Pendent Installation with 3/4 inch conduit

1. Loosen the screw on the side of the housing and pull out the connecting plate.
2. Connect the wires as shown below.
3. Screw the lamp and conduit pole together tightly.

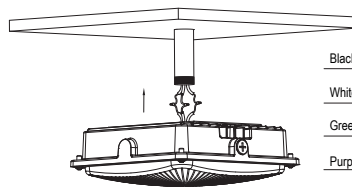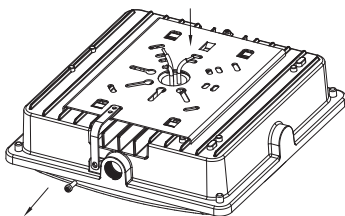


Black	○	Line
White	○	Neutral
Green	○	Ground
Purple	○	Dim +
Grey(Pink)	○	Dim -

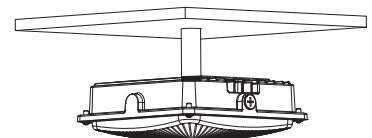


CCT & Power Select Guidance


1. Loosen the screw on the side of the housing and pull out the connecting plate.
2. Cap must be screwed back after CCT & Power Selection.

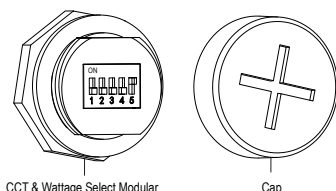

Wattage Select

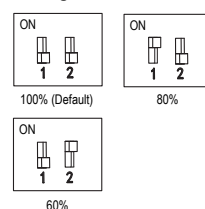

Photocell



CCT Select

