OLOF WALL PACK LIGHT (SEMI CUTOFF)



IMPORTANT SAFEGUARDS

PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before you install and use the luminaire.

- · To prevent personal injury or product damage only licensed electricians should install.
- · To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -30°c to 40°c and to be horizontally mounted with the LEDs facing down.
- · No user serviceable parts inside.
- Wall mount only.
- · Suitable for wet locations.



WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

MOUNTING

The back plate has a cast-in drill and knock-out template to match any standard recessed junction box, three 5/16" knockouts for mounting holes (B) and four 1/2"NPS tapped holes (A) for surface conduit, photo control.

- A 1/2" NPS tapped holes
- B 5/16" dia. knockouts
- C knockout for # 10 screw

LOCATION: Fixture should be located on a wall at least 18" below any overhang or other structural detail. Fixture should not be recessed. The fixture should be mounted in the horizontal position.

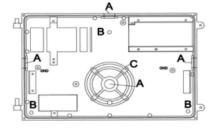


Fig 1

INSTALLATION

- 1. Open the lens assembly.
- 2. Prepare the back plate for mounting by drilling or knocking out the appropriate holes. (Fig 1)
- 3. Line up the back plate in desired location and mount securely. (Two gaskets provided for weather-tight seal between template and junction box.)
- 4. Complete the wiring to the power source and ground. (Fig 2)

Universal voltage driver permits operation at 100V to 277VAC, 50 or 60Hz except fixtures factory ordered with a 120V photocell (/PC).

- 1. Connect the black fixture line to the (L) Live line supply wire.
- 2. Connect the white fixture line to the (N) Neutral line supply wire.
- 3. Connect the green fixture line to the (G) Ground line supply ground.
- 5. Reassemble the lens set.
- 6. Coat with glass glue on the edge of the bottom shell.

WIRE CONNECTION

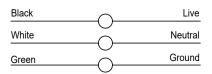


Fig 2